

Installation

Spread the jacket front side up on a flat surface and work on it

*Remove the airbag system from the jacket in the reverse order.



1 Unbutton the keybox cover and fully open the zipper.



Unused CO2 gas cartridge removed from the airbag system

CAUTION
The used gas cartridge has a hole at the bottom (sealing plate).



2 Fully open the hem zipper on the inside of the jacket.

Pass the tip of the neck part of the airbag through the opening at the right shoulder.




3 Align the male and female Velcro tapes on the four sides of the keybox and attach it so that there is no misalignment.

4 Pass the neck part of the airbag system through the right shoulder opening to the left shoulder opening.




Secure the neck part of the airbag system with the three Velcro tabs on the neck. Fasten the Velcro tapes of the airbag system at the base part of the Velcro tabs.

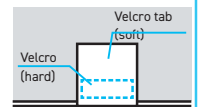


CAUTION
Failure to fasten the Velcro tapes to any part other than the base part of the Velcro tabs will result in incorrect storage of the airbag system and may result in malfunction.



5 Fasten the Velcro tapes on the neck, and Velcro tapes and buttons on both shoulders.

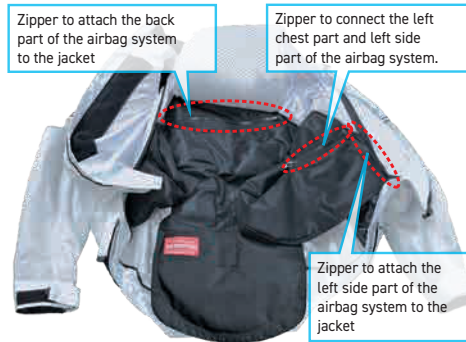

6 Fasten three zippers inside the jacket and the buttons on the back.

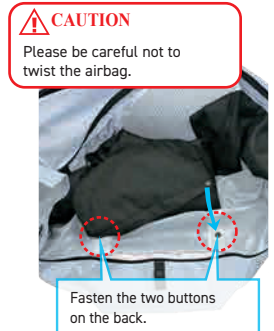

CAUTION
Please be careful not to twist the airbag.

Fasten the two buttons on the back.



7 Close the hem zipper on the inside of the jacket.



8 Stow the neck part of the airbag in the neck cover of the jacket, and fasten the buttons and Velcro tapes on the cover.

9 Install the CO2 gas cartridge and take out the connector from the hole of the keybox cover.



Install the CO2 gas cartridge while screwing it vertically into the screw hole of the keybox.



CAUTION
Be careful not to screw the CO2 gas cartridge in at an angle.



10 Close the zipper of the keybox cover and fasten the buttons to complete the installation.