



## 1. Use of the wheel maintenance holder

The wheel maintenance holder is packaged in ready-to-use state. It is used for faster and more comfortable mounting and dismounting of the wheel, during which the wheel is held without the axis shifting. It can also be used for easier attachment of the brakes, and generally for easier manipulation of the wheel during maintenance tasks. It is especially suitable for servicing the rear wheel. The wheel service stand is intended as an accessory for wheel maintenance and is not intended for lifting the motorcycle. It is designed to support the weight of common motorcycle wheels with a maximum width of 200mm.

Using the wheel service stand is simple: slide the folded stand under the raised motorcycle wheel and lift the stand by turning the hand screw until the wheel is supported. You can now detach the wheel and move it on the stand as needed during the service.

The maximum lift of the stand is 9 centimeters.

For further information, visit the product page on our eshop at [sefismoto.com](http://sefismoto.com)



## 2. Warning

The wheel maintenance holder is not intended for lifting the motorcycle and is designed only for holding the wheel during maintenance. Follow basic safety rules during the maintenance. Do not use in the presence of children.